 
 


 
 


BL-A/TX

 
 
 


QE-AC1/1.0/RX

433.92 MHz	-10 +55 °C	100000 nr	12
------------	------------	-----------	----

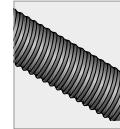 


Ø75	10
Ø100	7

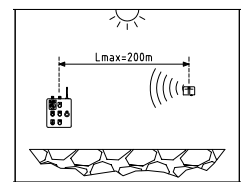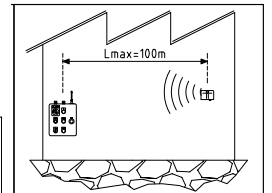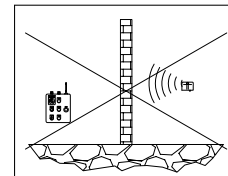

	ON
	OFF
	LOW BATTERY

- Sistema di partenza automatica del ventilatore montato su bilanciere. Comunica con il sistema di ricezione QE-AC1/RX da collegare al ventilatore centralizzato.
- Automatic start/stop system for sliding carriages. It works in connection with QE-AC1/RX to be ordered separately in accordance to the power of the centralized fan.
- Système de démarrage automatique du ventilateur monté sur équilibre. Il communique avec le coffret électrique QE-AC1/RX à choisir selon la puissance du ventilateur.
- Automatischer Ein- Ausschaltensystem für den Laufwagen, betätigt über Balancer. in Verbindung mit QE-AC1/RX. (Steuerung und Wagen nicht enthalten).
- Sistema de arranque automatico del aspirador para carritos deslizantes. Funciona con cuadro QE-AC1/RX a presupostar según la potencia del aspirador centralizado.

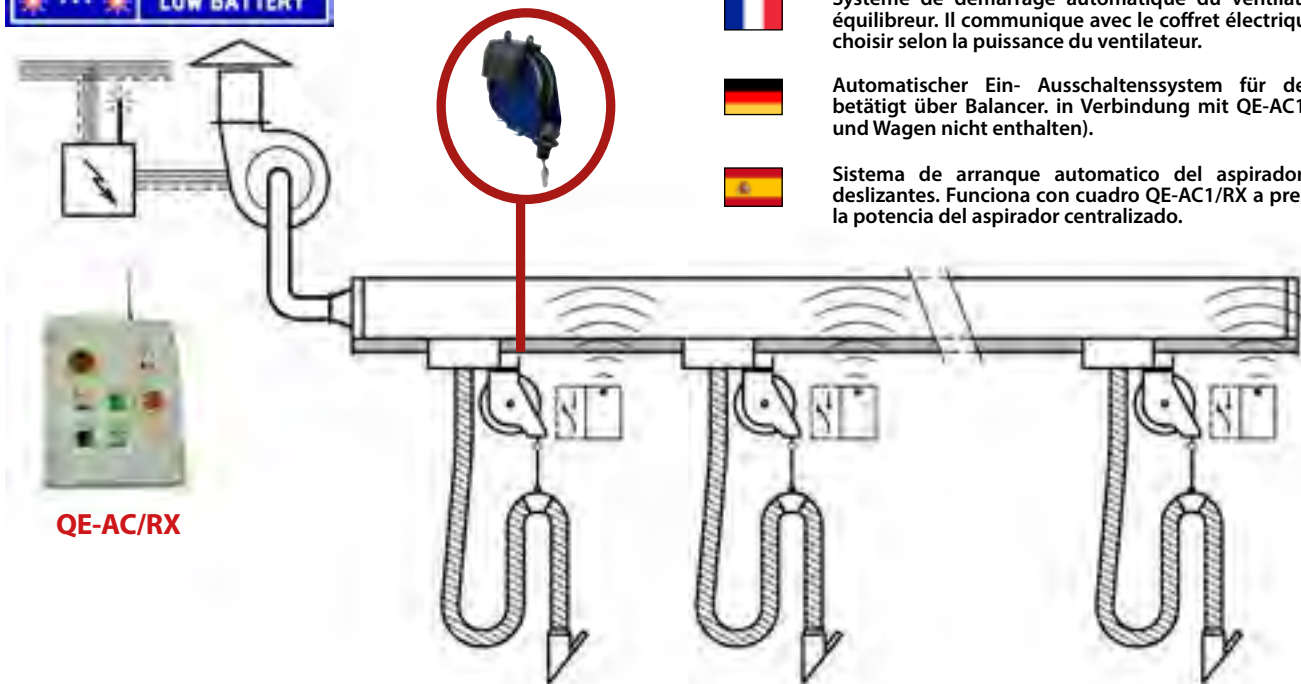

QE-AC/RX